




WiFi Guide

# A BRIEF GUIDE AS TO THE STEPS FOR WI-FI LOGGERS AND THE THERMADATA® HUB SOFTWARE

## SEND WIFI CREDENTIALS

1. Open **ThermaData Hub** (PC).
2. If available, connect your logger to the PC via USB cable.
3. Select **ThermaData WiFi** on the left hand menu.
4. Click the '**Connect Device**' Button.
5. Click the '**Connect to WiFi Network**' Button.

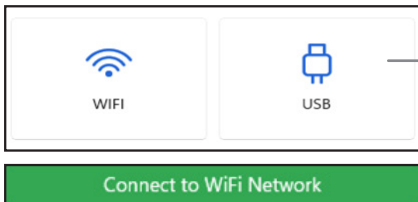

The connection selection window appears only when a Wi-Fi adapter is detected and the Logger is connected via USB; otherwise, the remaining option is selected automatically.

### VIA WI-FI

6. Select the **Wi-Fi network** you wish to connect to.
7. Press and Hold the **Start** and **Max/Min** so the screen displays '**Set up**'.
8. Your PC will connect to the Logger to send it the Wi-Fi settings.
9. If successful, you will see a **Wi-Fi and Cloud symbols** on the Logger Screen.

### VIA USB

6. Enter the **Wi-Fi network** name you wish to connect to.
7. Enter the **Wi-Fi network password** if prompted.
8. Your PC will send the settings to the Logger via the USB cable.
9. If successful, you will see a **Wi-Fi and Cloud symbols** on the Logger Screen.

## PAIR THE LOGGER

10. Click the '**Connect Device**' Button.
11. Enter the Loggers serial number. This is on the back of the Logger.
12. Select '**Full Access**' or '**Read Only Access**'.

**Full access** allows the loggers settings to be changed.



**Read Only access** only allows for readings to be recorded.

### FULL ACCESS

13. Push the **Start Button** on the front of the log-ger 5 times to generate a pairing key.
14. Input the **pairing key** into the text box.
15. Your Logger will now show on the **ThermaData WiFi** Screen.

### READ ONLY ACCESS

13. Enter into the box the connection key. This can be found on the back of the logger.
14. Your Logger will now show on the **ThermaData WiFi** screen.

### CHANGE THE SETTINGS

16. Click the **logger name** on the list to bring up more information on the logger.
17. Click '**Change settings for this Data Logger**'.
18. Adjust the settings to your requirements and click save. These will apply upon the next transmission.



The alarm settings allow for a push notification to be sent via ETI's Free Companion app **TD Link** if the logger records a temperature that exceeds the customisable limits.



ETI's free **TD Link** app is available on both the Google Play store and the iOS store.

Further information and guidance can be found within the [FAQ](#) on our website or by contacting [technical@etiltd.co.uk](mailto:technical@etiltd.co.uk).

Electronic Temperature Instruments Ltd  
Worthing · West Sussex · BN14 8HQ  
01903 202151 · [sales@etiltd.com](mailto:sales@etiltd.com) · [etiltd.com](http://etiltd.com)